



Maintenance

“SERVICE” Mode

This operating mode displays the mileage range with respect to expiration of the next scheduled maintenance.

NOTE

When the mileage range upon maintenance servicing is less than 1000 km, its relative value automatically appears after the start-up screen of the motorcycle.

**B**

“UNIT CHANGE” Mode

This function allows for simultaneous editing of the following units of measure:

- Speed
- Distance covered



“SERVICE” Mode

- Press the "SET" and "OK" buttons at the same time for more than ten seconds to access the "DEALER MENU".



WARNING

The modification or adjustment of display functions must be carried out with the engine off and running on neutral, with the motorcycle stopped with the stands on the ground. Changing display settings while running is prohibited.






Maintenance


B

- Press the "OK" button for less than three seconds until the message "SERVICE" is displayed. The mileage range with respect to expiration of the next scheduled maintenance is shown on this screen.

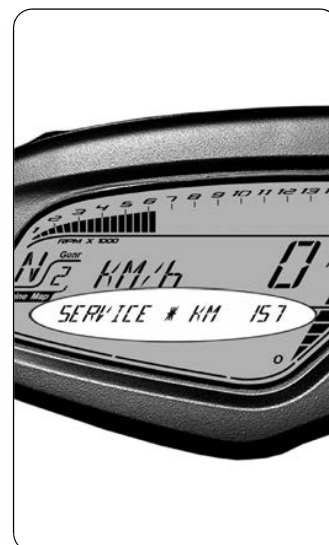

- *Mileage range resetting:* After performing scheduled maintenance, the mileage range must be reset using the following procedure.

- Access "SERVICE" mode and press the "OK" button for less than three seconds until the message "RESET KM" appears and the mileage range indicator light will begin to flash.

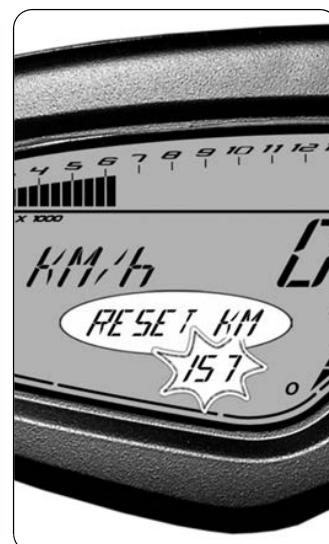

- Press the "OK" button for more than three seconds and the mileage range will be reset. The mileage range with respect to expiration of the next scheduled maintenance is shown on this screen.
- The next press of the "SET" button for less than three seconds will allow the user to return to the dashboard start screen.

